




 


PLEASE CHOOSE A PRODUCE ITEM OR ENTER THE LABEL CODE ON THE KEYPAD PRESS DONE TO CONFIRM OR "NO LABEL" TO CONTINUE

0		
1	2	3
4	5	6
7	8	9
CLEAR	0	DONE

* = ORGANIC



NO LABEL

 KIWI FRUIT	 NAVEL ORANGES
 BANANA	 APPLES

X CANCEL **? CALL CASHIER**

FIG. 1

 PLEASE SELECT YOUR PRODUCE TYPE

 BRAEBURN	 CRAB
---	---

* = ORGANIC

NO LABEL

← GO BACK **? CALL CASHIER**

FIG. 2


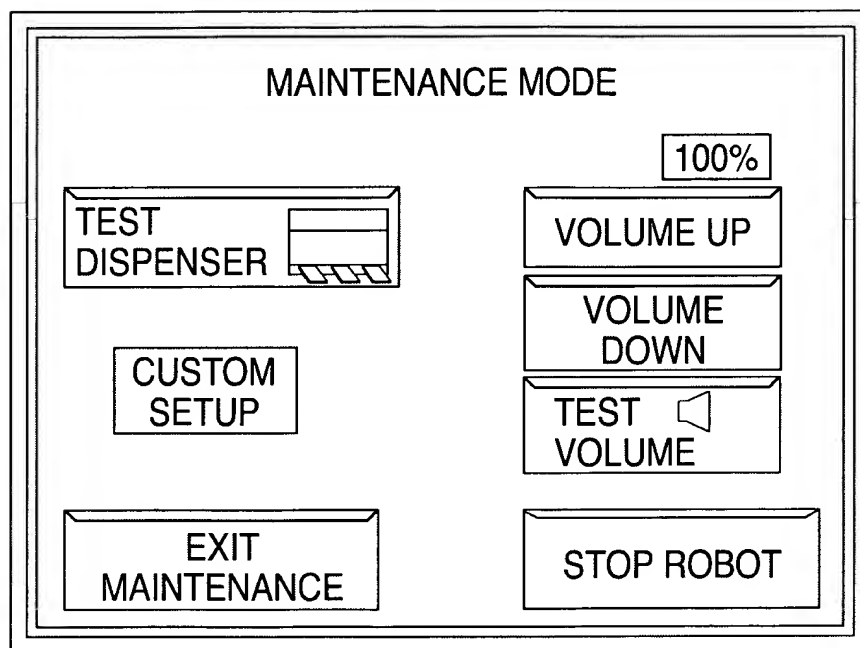 


FIG. 3

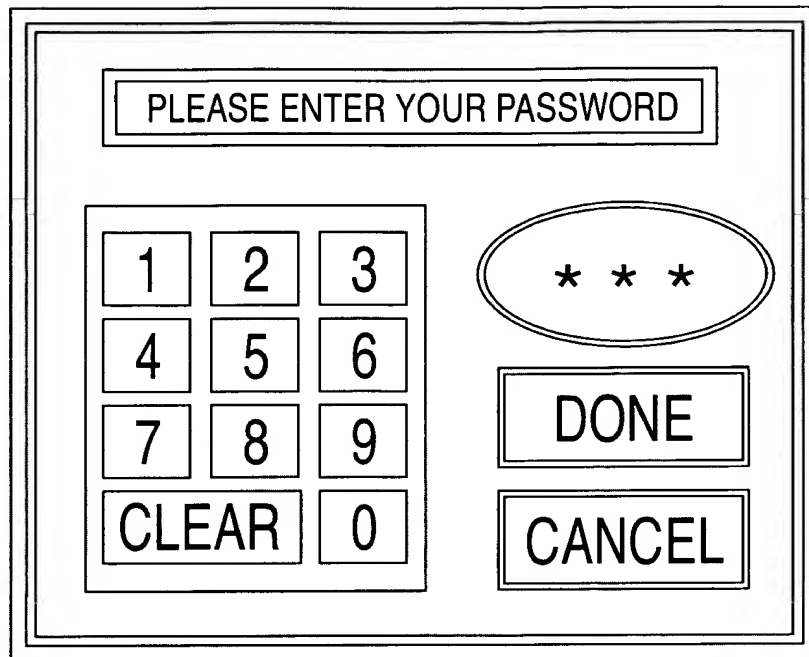 

PLEASE ENTER YOUR PASSWORD

1	2	3
4	5	6
7	8	9
CLEAR	0	


* * *

DONE

CANCEL

This diagram shows a password entry interface. At the top, a rectangular box contains the text "PLEASE ENTER YOUR PASSWORD". Below this, on the left, is a numeric keypad with a 3x3 grid of buttons for digits 1 through 9, and a bottom row with "CLEAR" and "0" buttons. To the right of the keypad is an oval-shaped display showing three asterisks (* * *) to represent the entered password. Below the display are two rectangular buttons: "DONE" and "CANCEL".

 FIG. 4

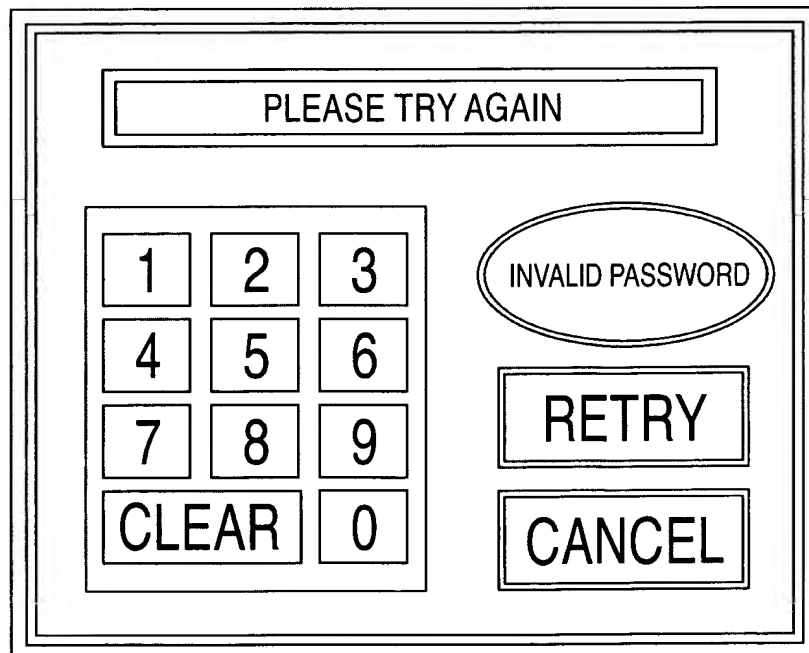

PLEASE TRY AGAIN

1	2	3
4	5	6
7	8	9
CLEAR	0	

INVALID PASSWORD

RETRY

CANCEL

This diagram shows a password retry interface. At the top, a rectangular box contains the text "PLEASE TRY AGAIN". Below this, on the left, is a numeric keypad identical to the one in FIG. 4, with buttons for digits 1 through 9, "CLEAR", and "0". To the right of the keypad is an oval-shaped display showing the text "INVALID PASSWORD". Below the display are two rectangular buttons: "RETRY" and "CANCEL".

FIG. 5

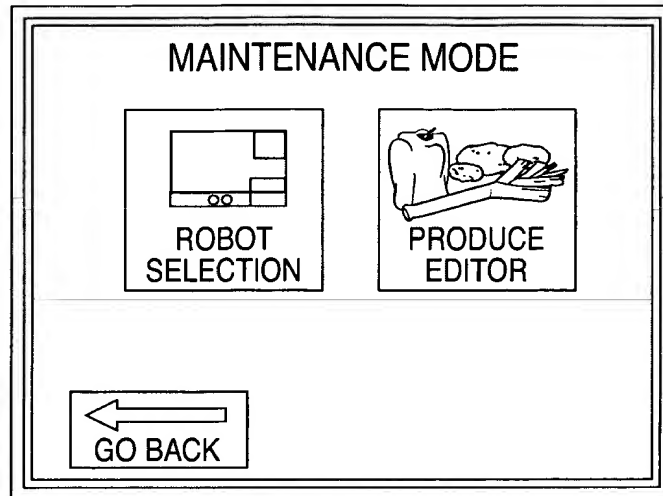 


FIG. 6

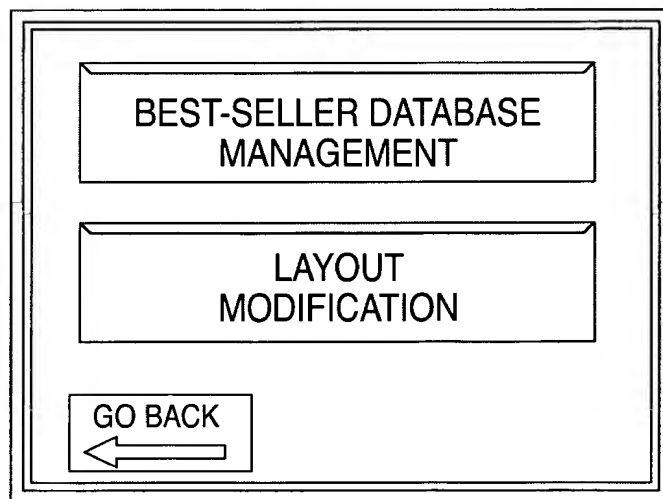 


FIG. 7

HOW OFTEN DO YOU WANT TO
RESET THE DATABASE?

DAILY	BI-WEEKLY
WEEKLY	MONTHLY

EXIT

FIG. 8

ON WHICH WEEKDAY DO YOU WANT THE
RESET TO TAKE PLACE?

MONDAY	TUESDAY	WEDNESDAY	THURSDAY
FRIDAY	SATURDAY	SUNDAY	

←
GO BACK

FIG. 9

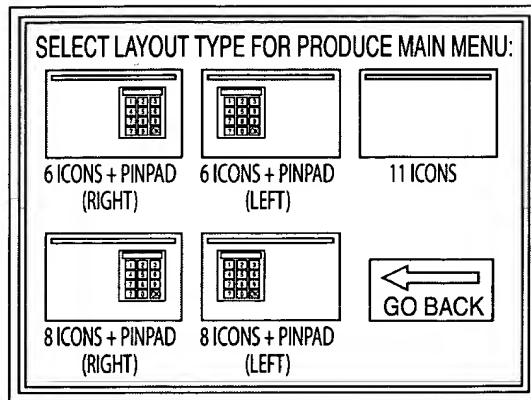 


FIG. 10

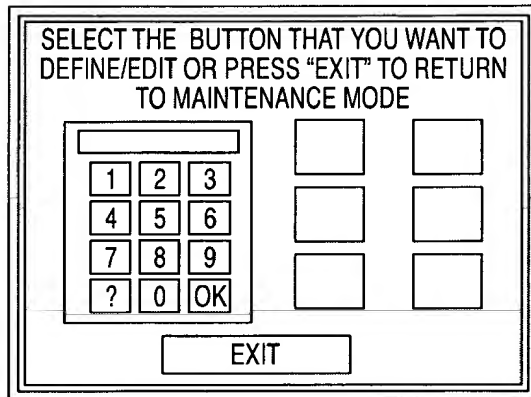 


FIG. 11

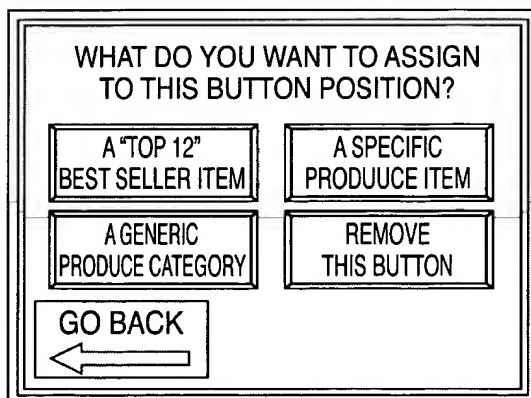 


FIG. 12


SELECT THE BUTTON THAT YOU WANT TO
DEFINE/EDIT OR PRESS "EXIT" TO RETURN
TO MAINTENANCE MODE

			BEST SELLER #1	BEST SELLER #2
1	2	3		
4	5	6		
7	8	9		
CLEAR	0	OK		

EXIT

FIG. 13

ENTER THE PLU CODE OF THE PRODUCE ITEM
AND PRESS THE ITEM TO CONFIRM OR
PRESS CLEAR TO ENTER A DIFFERENT PLU

4011			 BANANA
1	2	3	
4	5	6	
7	8	9	
CLEAR	0		




 GO BACK

FIG. 14


ENTER THE PLU CODE OF THE PRODUCE ITEM
AND PRESS THE ITEM TO CONFIRM
OR PRESS CLEAR TO ENTER A DIFFERENT PLU

94011		
1	2	3
4	5	6
7	8	9
CLEAR	0	

 

BANANA

 ORGANIC




GO BACK

FIG. 15

ENTER THE PLU CODE OF THE PRODUCE ITEM
AND PRESS THE ITEM TO CONFIRM
OR PRESS CLEAR TO ENTER A DIFFERENT PLU

94011		
1	2	3
4	5	6
7	8	9
CLEAR	0	

 
NOT FOUND



GO BACK

FIG. 16

SELECT THE BUTTON THAT YOU WANT TO
DEFINE/EDIT OR PRESS "EXIT" TO RETURN
TO MAINTENANCE MODE

			BEST SELLER #1	BEST SELLER #2
1	2	3	 BANANA	
4	5	6		
7	8	9		
CLEAR	0	OK		

EXIT

FIG. 17

DO YOU WANT TO:

ASSIGN GENERIC PRODUCE CATEGORY TO THIS BUTTON
CREATE SUBMENU FOR THIS GENERIC PRODUCE CATEGORY

GO BACK

 


FIG. 18

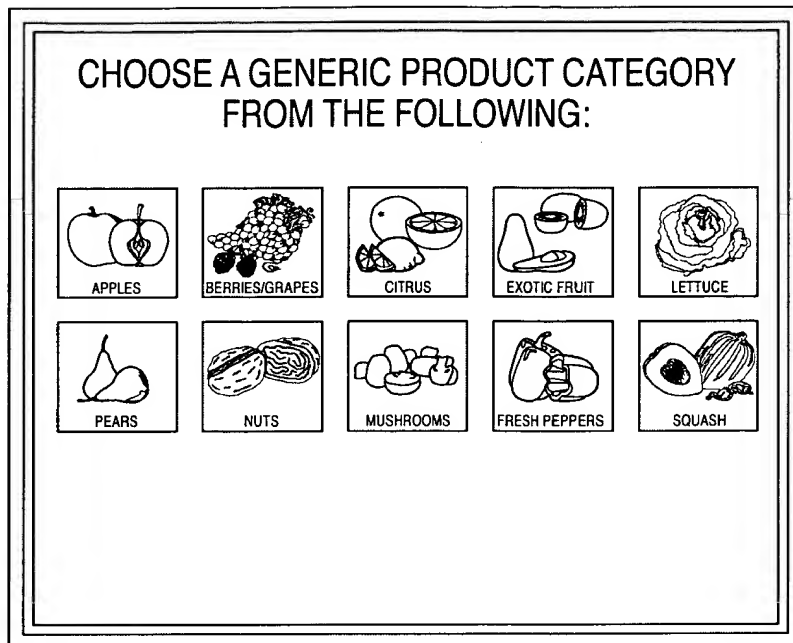 


FIG. 19

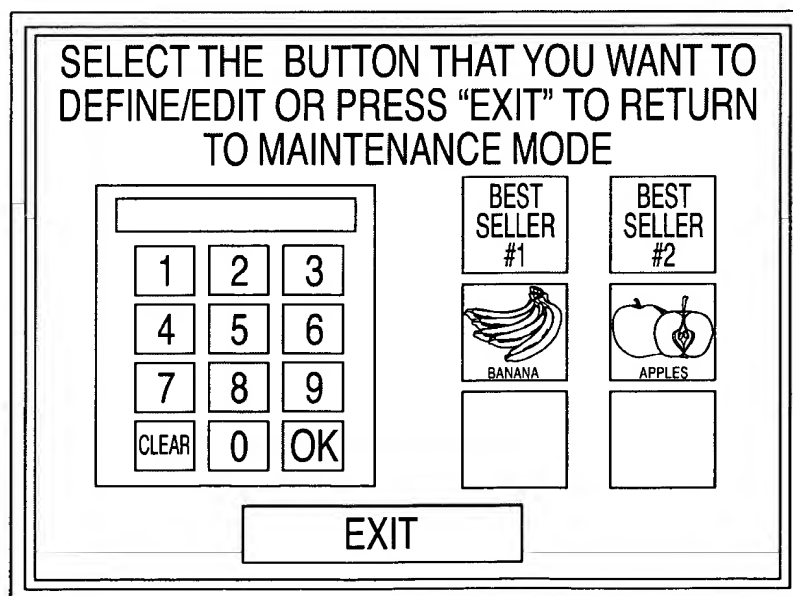 


FIG. 20

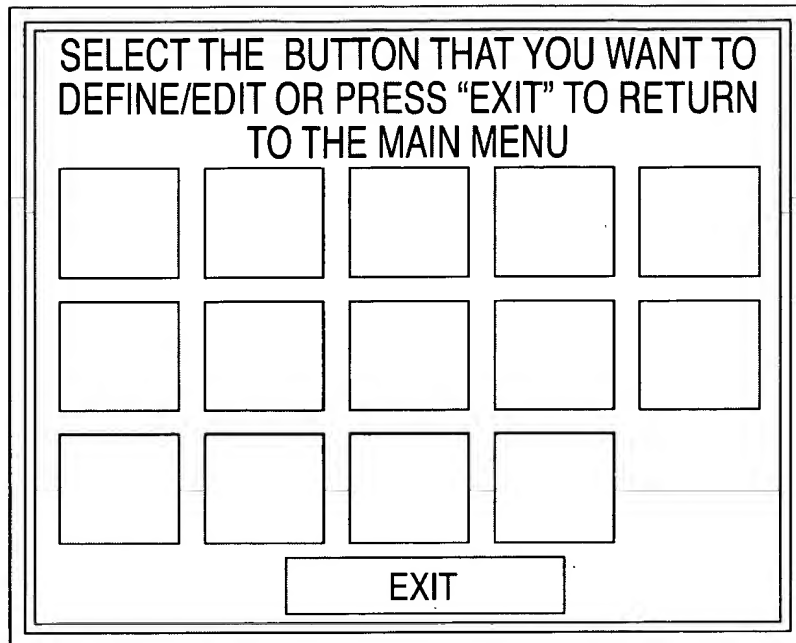 


FIG. 21

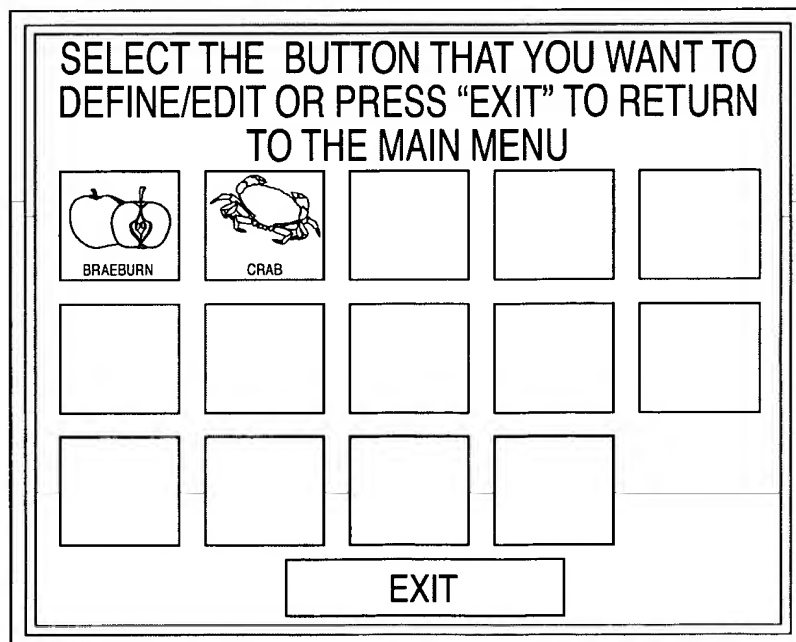 


FIG. 24

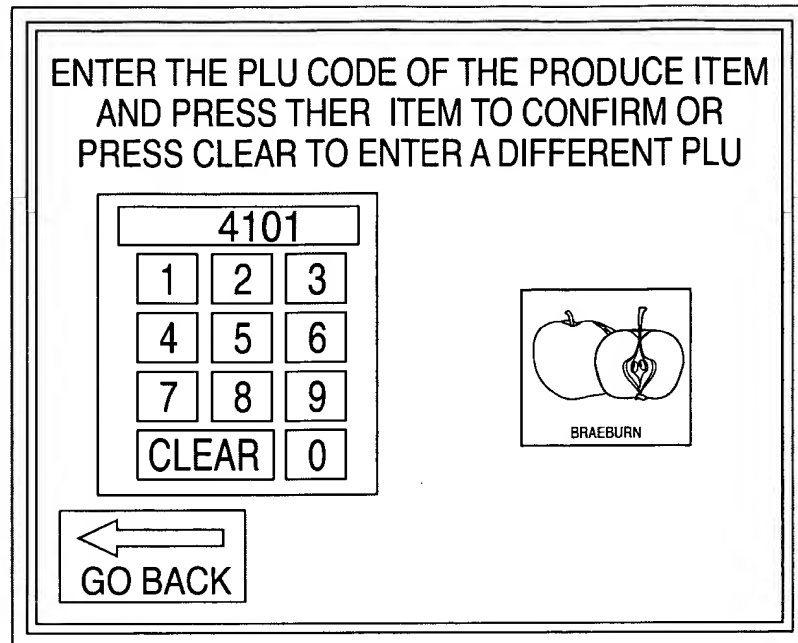 


FIG. 22

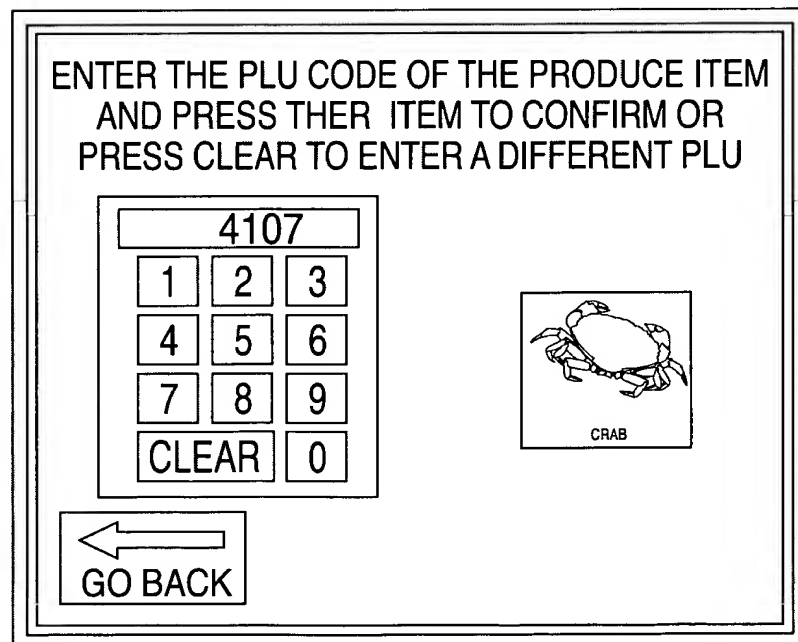 


FIG. 23

THE BUTTON YOU HAVE SELECTED
IS A GENERIC CATEGORY
WITH A SUBMENU THAT HAS
ALREADY BEEN DEFINED

DO YOU WISH TO CHANGE
THIS BUTTON ANYWAYS?

YES NO

GO BACK

 


FIG. 25

ARE YOU SURE YOU WISH
REMOVE THIS BUTTON?

YES NO

GO BACK

 


FIG. 26

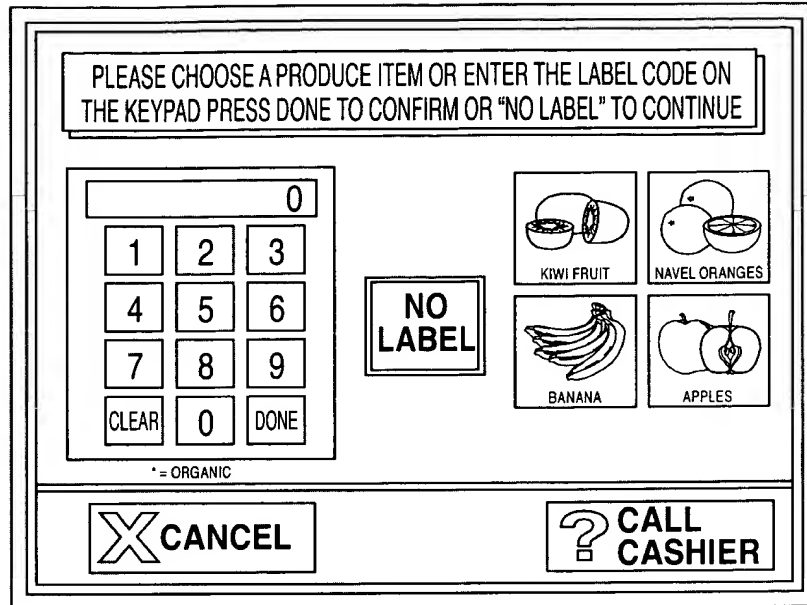 


FIG. 27

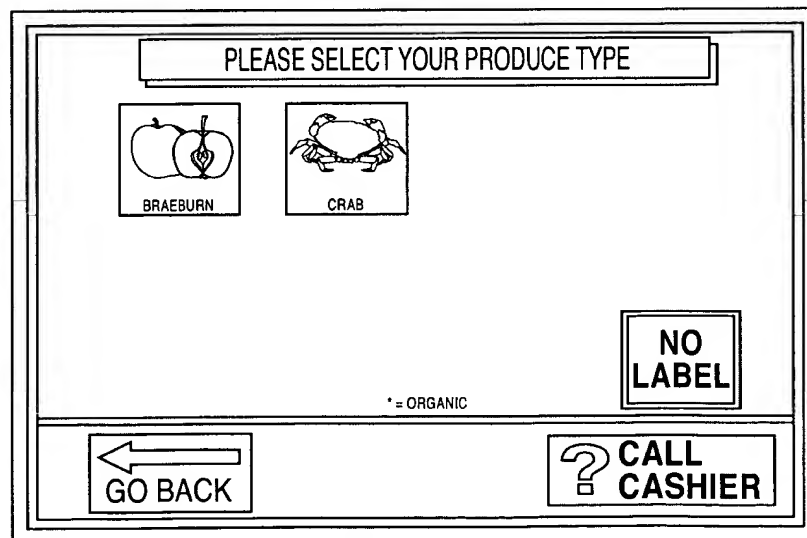 


FIG. 28

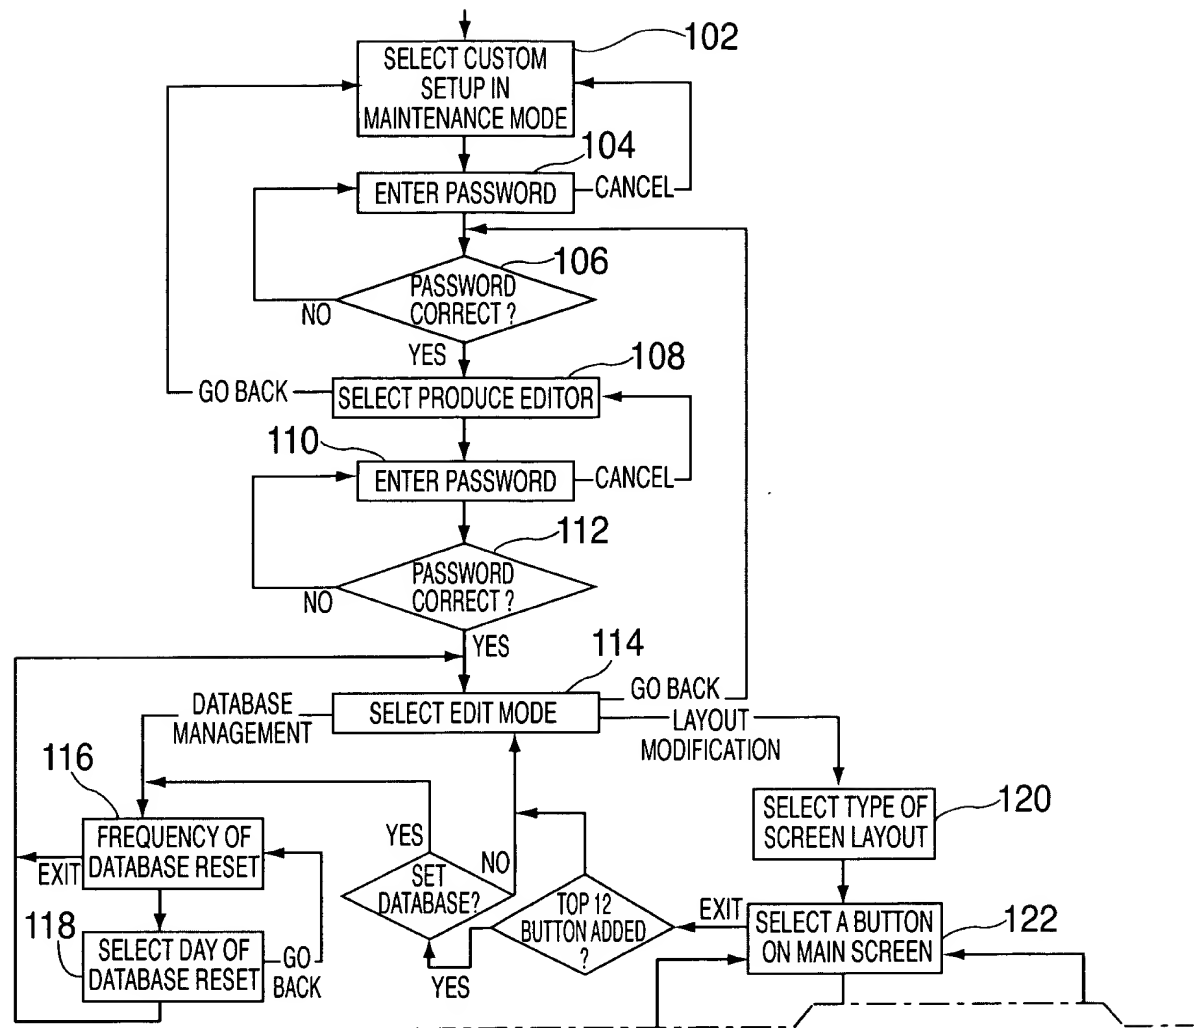 


FIG. 29A

29A
29B

FIG. 29

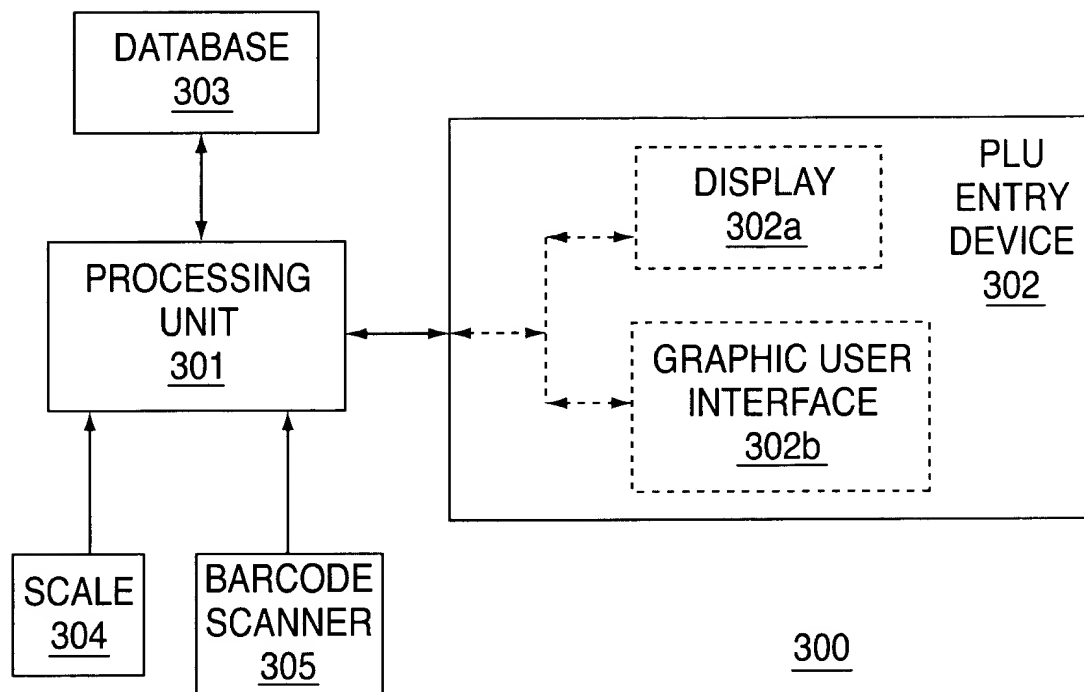 


FIG. 30